


Installation Instructions – Bi-Xenon Headlamps w/LED DRL

Audi A8 (4E)

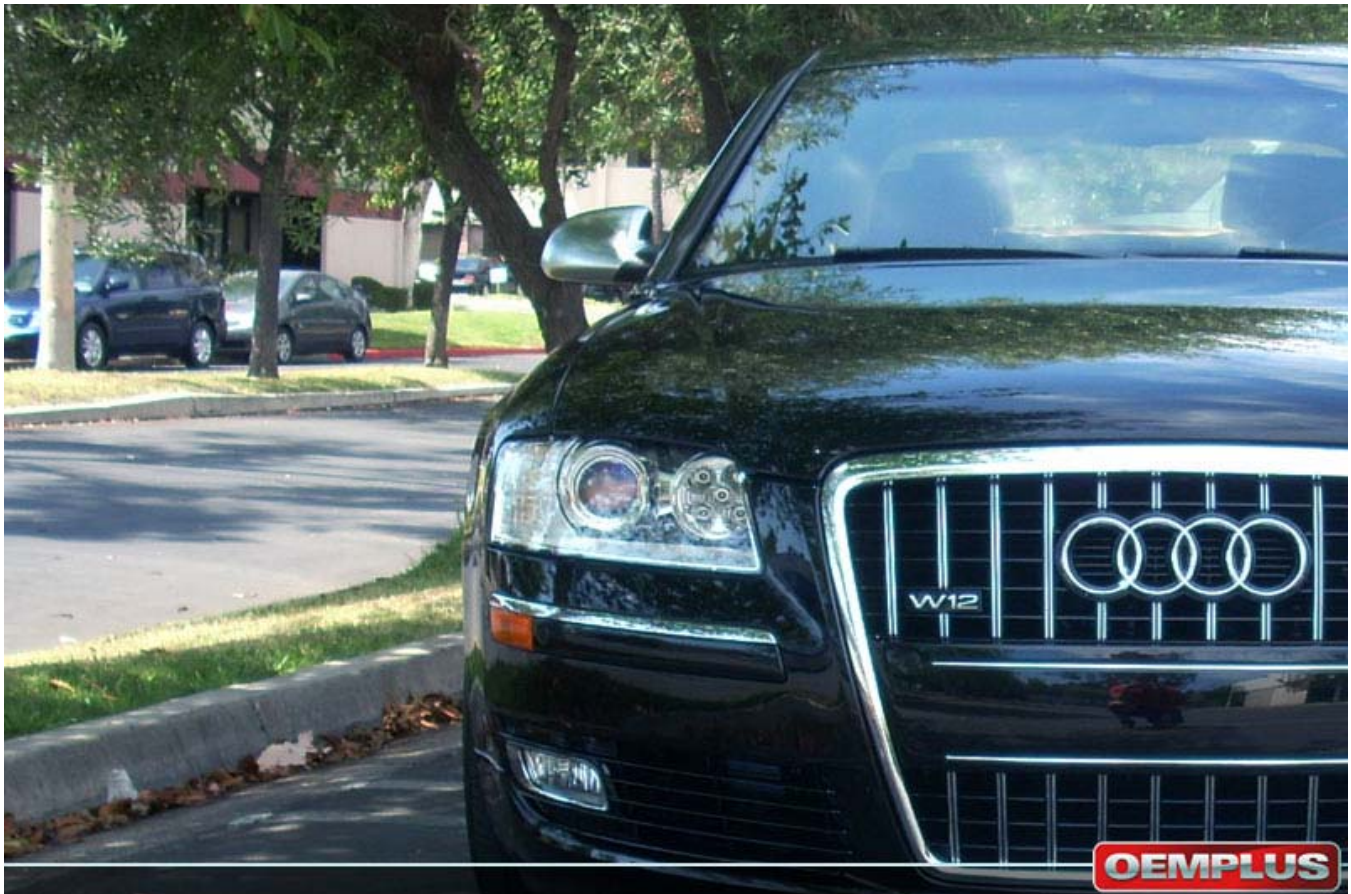

Overview

This article is intended to provide a programming guide for enthusiasts wanting to retrofit the W12 & S8 LED-equipped headlamps.

Parts Required for Installation

- Headlamp, Left
- Headlamp, Right

Tools Required for Installation

- T-20 Torx
- 13mm Socket

Installation

- We assume you can remove and replace your own headlamps.

Reprogramming

This section is written with the expectation that you will be using the VCDS (VAG-Com) software. Slight variations may be required if you are using VAS or another diagnostic/scanning tool.

- Access the Central Electronics Control Unit (09).
- Select Coding (07).
- Change whatever coding you have in as follows:
 - x x 3 x x x x – Bi-Xenon lights w/LED
 - x x x x 1 x x – With daytime driving lights
 - x x x x x 2 x – Daytime driving lights selectable via MMI
- Access Headlight Control Unit (53)
- Select Coding (07).
- Change the last digit of the coding to xxxxxx3 – Cornering Light W12